


# Pole-Wrap Side Cap Display Instructions


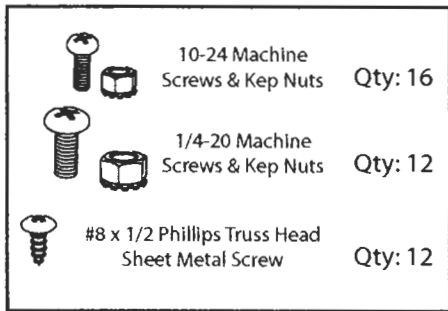


## Tools Required:

- Powered Screwdriver with Phillips bit
- 3/8" Wrench
- 7/16" Wrench

**IMPORTANT SAFETY NOTE:** The display must be bolted to the metal uprights of the H rack with the supplied 10-24 bolts.

**NOTE:** The difference in the hole patterns between the upper and lower tubes are as shown here.

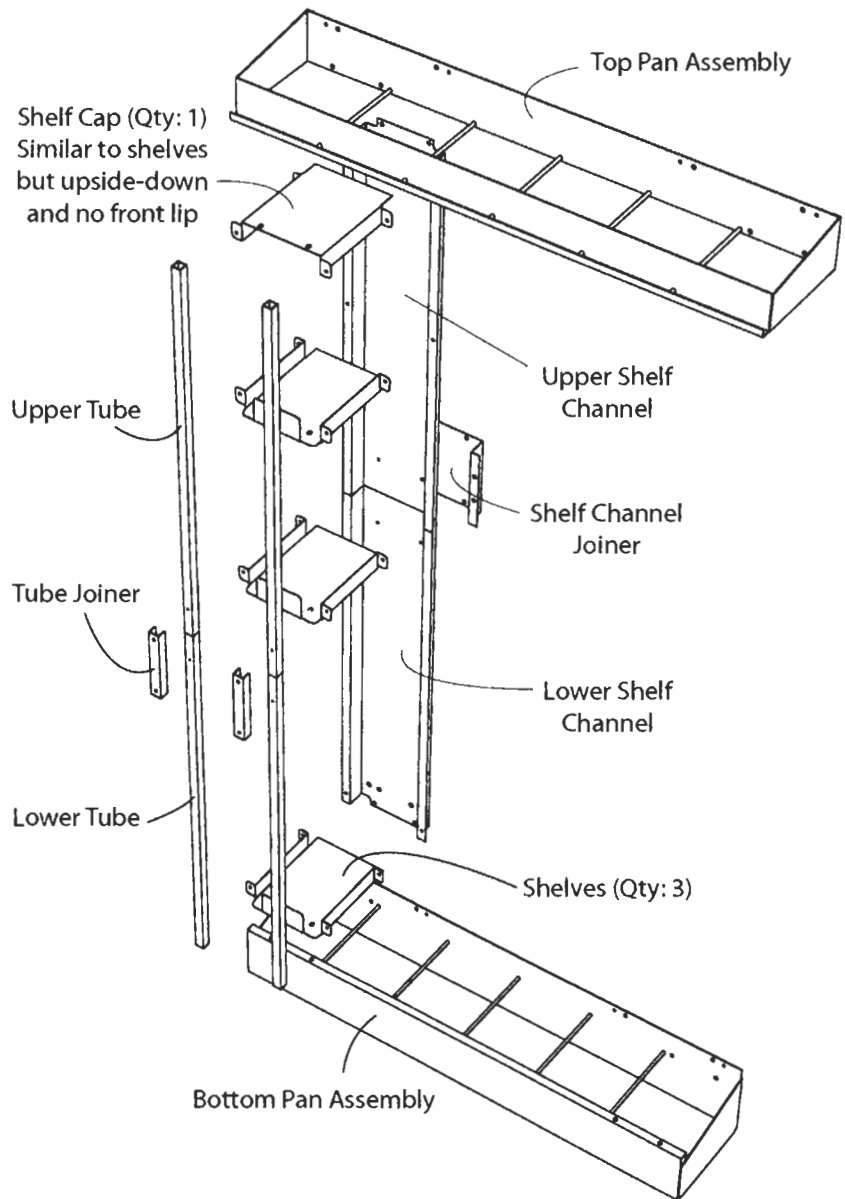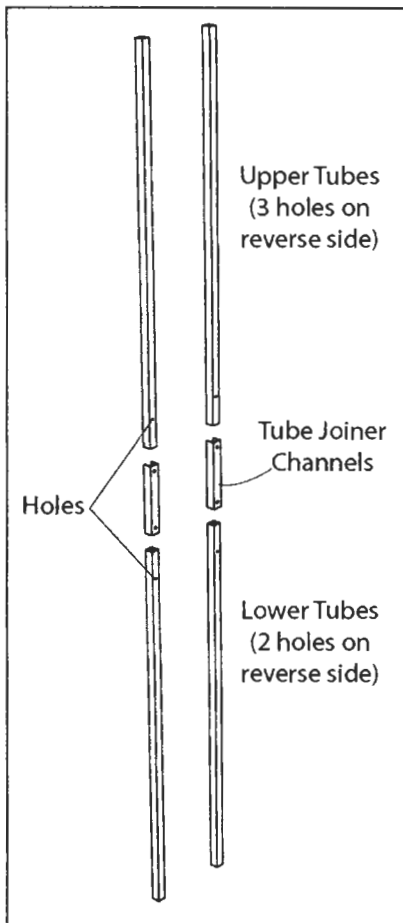

# Pole-Wrap Side Cap Display Instructions

**4.** Bolt the 2 rear holes of shelf cap to the upper shelf channel using (qty 2) 10-24 x 1/2" machine screws & kep nuts.

**3.** Bolt shelf cap to top pan assembly with (qty 2) 1/4-20 x 1/2" machine screws and kep nuts. (Screw heads on top, nuts on bottom. This allows header sign to sit flat on upper pan lip. Note: the orientation of shelf cap is upside-down compared to the orientation of the other 3 shelves. Note: the orientation of shelf cap is upside-down compared to the orientation of the other 3 shelves.

**1.** Assemble tubes using tube joiners and (qty 4) #8 x 1/2" Sheet Metal screws. Note the hole pattern in the upper and lower tubes (page 1).

**8.** Connect tube assemblies to front of the shelves using (qty 8) #8 x 1/2" Phillips Truss head sheet metal screws.

## Quick Hardware Reference:

- . Use #8 x 1/2 sheet metal screws for building tube assemblies.
- . Use 10-24 x 1/2" machine screws for attaching to shelf channels.
- . Use 1/4-20 x 1/2" machine screws for attaching to the pan assemblies.
- . Use #8 x 1/2" sheet metal screws for attaching shelf fronts to tube assemblies.

**5.** Bolt the upper shelf channel to the top pan assembly using 1/4-20 x 1/2" machine screw and kep nuts. Attach bottom pan assembly to lower shelf channel


**6.** Bolt shelves (as shown) to shelf channels using 10-24 x 1/2" machine screws and kep nuts. Note: Use outside holes on lower shelf channel to mount middle shelf

**2.** Use (qty 6) 10-24 x 1/2" machine screws and kep nuts to connect shelf channels. Note: Shelf channel joiner fits outside channels. Note: Hole pattern in upper and lower channels, see page 1 hole pattern. Note: Leave bottom outside holes open for shelf

**7.** Bolt front of Shelf to bottom pan assembly with 1/4-20 x 1/2" machine screw and kep nuts. (Screw heads on top, nuts on bottom).

## Pole-Wrap Side Cap Display Instructions

9. Peel tape backing and attach 33" x 8" flex hinge C-channel to front lip of top pan. Secure hinge to front lip with 3 self tapping screws by screwing through the front of the hinge and allowing the C-channel to hang down and cover the screw heads. Insert header sign into C-channel. Note: Flex hinge C-channel and sign are not included in display box. (Order on ePOP).

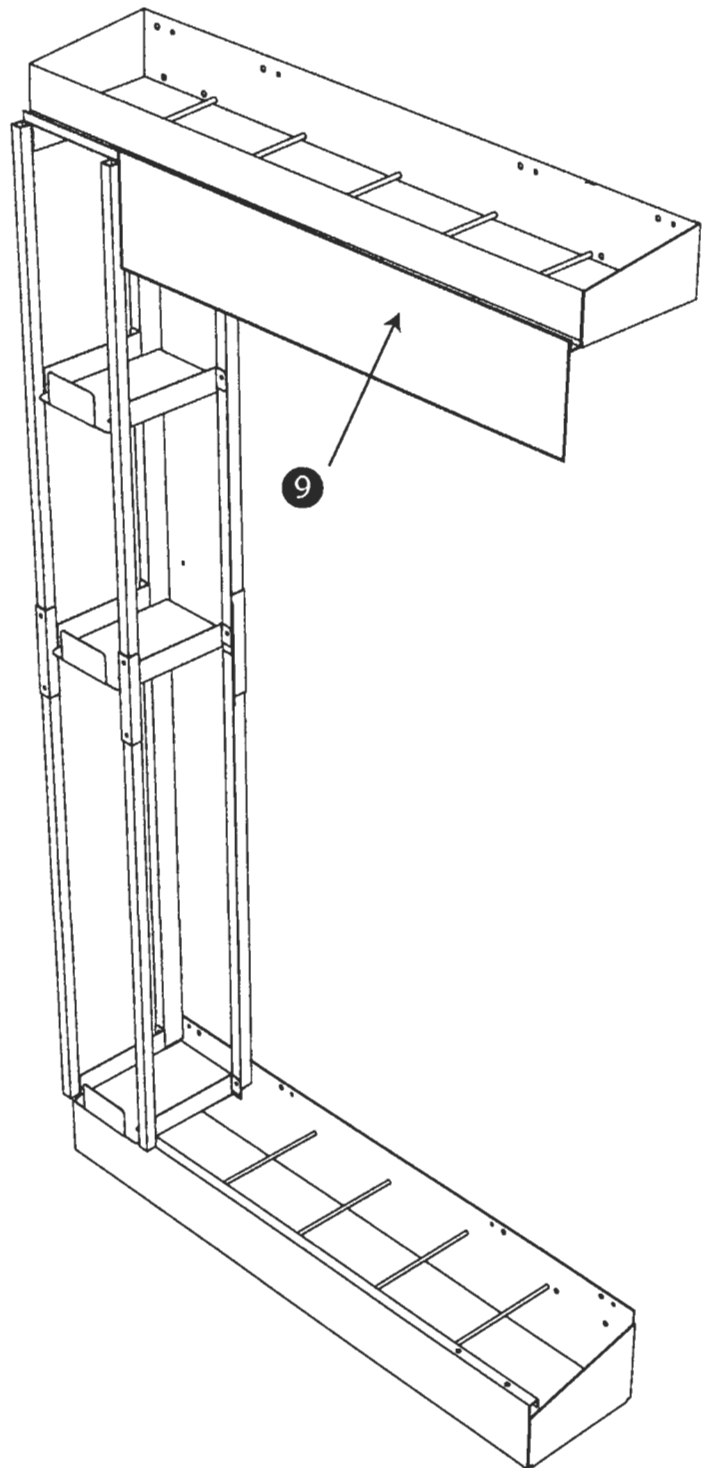

NOTE: Mount unit on the H-Rack so the bottom pan is at least 12-inches off the floor.